

BACK TO

# SCHOOL

2023



# Disney CLASSICS



341-21053  
Раница за детска градина.  
В31/Ш22/Д15см



341-21141  
Несечер.  
В9/Ш21/Д6см



**HELLO  
KITTY**



335-71031  
Раница  
В45/Ш32/Д21см.



335-71220 Термо  
чанта за храна.  
В19/Ш21/Д16см.



335-71144  
Несесер.1цип.  
В9/Ш21/Д6см.



**HELLO  
KITTY**



5 204549 154650

335-71100 Несер,  
двоен цип, пълен.  
В20/Ш14/Д4см.



5 204549 154629

335-71054 Раница  
за детска градина.  
В31/Ш22/Д15см.

RAINBOW  
HIGH™



5 204549 155220

363-50100 Несесер,  
двоен цип, пълен.  
В20/Ш14/Д4см.



5 204549 155367

363-50220 Термо  
чанта за храна.  
В19/Ш21/Д16см.

**emoji**<sup>TM</sup>  
THE ICONIC BRAND



368-02031  
Раница  
В45/Ш32/Д21см.



368-02141  
Несесер.1цип.  
В9/Ш21/Д6см.



368-02100 Несесер,  
двоен цип,пълен.  
В20/Ш14/Д4см.



368-02220 Термо  
чанта за храна.  
В19/Ш21/Д16см.



emoji™  
THE ICONIC BRAND



368-03034  
раница, две  
отделения, два  
странични и  
един преден  
джоба В45/  
Ш32/Д21



368-03141  
Несер. 2 ципа.  
В9/Ш21/Д6см.






5 204549 150201

349-44053 Раница  
за детска градина.  
В31/Ш22/Д15см.



5 204549 146358

349-18053 Раница  
за детска градина.  
В31/Ш22/Д15см.



5 204549 146372

349-19053 Раница  
за детска градина.  
В31/Ш22/Д15см.





349-28144  
Несер.2ципа.  
В9/Ш21/Д6см.



349-28031  
Раница  
В45/Ш32/Д21см.



349-28054 Раница  
за детска градина.  
В31/Ш22/Д15см.



349-28100 Несер,  
двоен цип, пълнен.  
В20/Ш14/Д4см.



349-28580 Папка  
с копче.  
PP A4



LEAGUE<sup>OF</sup>  
LEGENDS™



345-06031  
Раница  
В45/Ш32/Д21см.



345-06141  
Несер.2ципа.  
В9/Ш21/Д6см.

LEAGUE<sup>OF</sup>  
LEGENDS™



345-07031  
Раница  
В45/Ш32/Д21см.



345-07100 Несер,  
двоен цип, пълен.  
В20/Ш14/Д4см.

LEAGUE<sup>OF</sup>  
LEGENDS™



345-08031  
Раница  
В45/Ш32/Д21см.



345-08141  
Несесер.2ципа.  
В9/Ш21/Д6см.



NERF



Подарък



336-34031  
Раница  
В45/Ш32/Д21см.



336-35031  
Раница  
В45/Ш32/Д21см.



337-02100 Несесер,  
двоен цип, пълен.  
В20/Ш14/Д4см.



337-04054 Раница  
за детска градина.  
В31/Ш22/Д15см.



337-04580  
Папка с копче.  
PP A4



334-49054 Раница  
за детска градина.  
В31/Ш22/Д15см.



334-42054 Раница  
за детска градина.  
В31/Ш22/Д15см.



334-38100 Несесер,  
двоен цип,пълен.  
В20/Ш14/Д4см.



334-43054 Раница  
за детска градина.  
В31/Ш22/Д15см.



334-48580  
Папка с копче.  
PP A4



# SONIC



5 204549 157101

334-81100 Несесер,  
двоен цип, пълен.  
В20/Ш14/Д4см.




5 204549 157064

334-81031  
Раница  
В45/Ш32/Д21см.



5 204549 157118

334-81140 Несесер  
кръгъл  
Ш21/Р7см

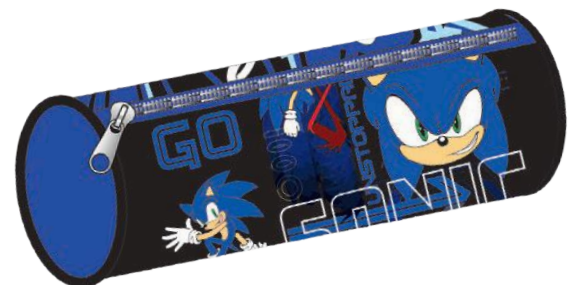

# SONIC 2

THE HEDGEHOG


334-80100 Несер,  
двоен цип, пълен.  
В20/Ш14/Д4см.



334-80031  
Раница  
В45/Ш32/Д21см.



334-80140 Несер  
кръгъл  
Ш21/Р7см

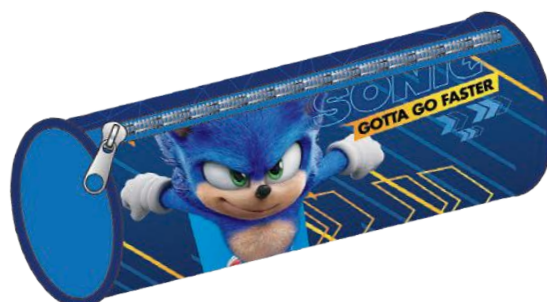



5 204549 155268

334-81580  
Папка с копче .  
PP A4



316-00031  
Раница  
В45/Ш32/Д21см.

MINECRAFT

316-00144  
Несесер.2ципа.  
В9/Ш21/Д6см.



316-00220 Термо  
чанта за храна.  
В19/Ш21/Д16см.